

# TABLE OF CONTENTS

## DESCRIPTION

## PAGE

### SECTION A: MAIN LOADER COMPONENTS

Mainframe . . . . .	1
Wheel Drives . . . . .	3
Engine and Engine Controls . . . . .	5
Fuel System . . . . .	9
Air Cleaner and Muffler . . . . .	11
Cooler Water System . . . . .	13
Hydrostatic Mount and Linkage . . . . .	15
Hydrostatic Plumbing . . . . .	17
Charge, Cooler and Return Filter Plumbing . . . . .	19
Auxiliary Circuit Plumbing . . . . .	21
Tilt Circuit Plumbing . . . . .	23
Lift Circuit Plumbing . . . . .	25
Self-Level Valve Plumbing . . . . .	27
Foot Pedal Control and Cabin Panel . . . . .	29
Steering Controls . . . . .	35
Lift Arm . . . . .	45
All-Tach™ Attachment System . . . . .	47
ROPS/FOPS . . . . .	49
Seat, Restraint Bar and Sound Suppression . . . . .	51
Rear Door and Engine Cover . . . . .	53
Electrical - Engine . . . . .	57
Electrical - Instrument Panel . . . . .	59
Electrical - Tail Lights . . . . .	61
Decals . . . . .	64

### SECTION B: HYDRAULIC COMPONENTS

Lift Cylinder . . . . .	73
Tilt Cylinder . . . . .	75
Drive Motor and Parking Brake . . . . .	77
Tandem Pump . . . . .	79
Gear Pump . . . . .	83
Main Control Valve . . . . .	85
Self-Leveling Valve . . . . .	87
Solenoid Valves - Lift and Tilt . . . . .	89
Brake Solenoid Valve . . . . .	91

### SECTION C: ENGINE SERVICE PARTS (3TNE88 ONLY)

Cylinder Block . . . . .	95
Gear Housing . . . . .	97
Flywheel Housing and Oil Sump . . . . .	99
Cylinder Head and Valve Cover . . . . .	101

# TABLE OF CONTENTS

## DESCRIPTION

## PAGE

### SECTION C: ENGINE SERVICE PARTS (3TNE88 ONLY)

Camshaft and Driving Gear . . . . .	103
Crankshaft and Piston . . . . .	105
Intake Manifold . . . . .	107
Exhaust Manifold . . . . .	109
Lubrication Oil System . . . . .	111
Cooling Water System. . . . .	113
Fuel Injection Pump . . . . .	115
Governor. . . . .	119
Fuel Injection Valve . . . . .	123
Fuel Line. . . . .	125
Starter Motor. . . . .	127
Alternator . . . . .	129
Gasket Set . . . . .	131

### SECTION D: KITS AND TIRES

Cab - Door with Wiper & Washer Kit 808265 . . . . .	135
Cab - Impact Resistant Door Kit 808382 . . . . .	136
Horn Kit 808274. . . . .	137
Four Point Lifting Kit 808273 . . . . .	138
Mirror, Rear View Kit 808269 . . . . .	139
Electrical Disconnect Switch Kit 808240 . . . . .	139
Pre-Cleaner Kit 808277 . . . . .	140
Engine Block Heater Kit 808396 . . . . .	140
Backup Alarm Kit 808264. . . . .	141
Cab - Sliding Side Windows Kit 808266 . . . . .	142
Strobe Light Kit 808279. . . . .	142
Cab - Heater/Defroster Kit 808267 . . . . .	143
Interior Dome Light Kit 808271. . . . .	144
Battery Disconnect Switch 808240 . . . . .	144
Self-Leveling Valve Kit 808263. . . . .	145
Cab - Door Interlock Kit 830600 . . . . .	146
Coolant Temperature Gauge Kit 810212 . . . . .	146
Tires . . . . .	147
Numerical Index . . . . .	148
O-Ring Table, Coupling & Adapter Torque Table . . . . .	155

### SECTION E: SCHEMATICS

Hydrostatic/Hydraulic Schematics . . . . .	157
Electrical Schematic. . . . .	158
Engine Harness Schematic* . . . . .	162
*MODEL 3635: SN 00001175 AND LATER. MODEL 3935: SN 00001337 AND LATER.	
Torque Specifications Table. . . . .	Inside Back Cover

Form No.  
908267

Revision D  
09/04

# SL3635 and SL3935 Skid-Steer Loaders



**PARTS MANUAL**

**GEHL**<sup>®</sup>

## Introduction

For your safety and continued proper operation, use only genuine GEHL® service parts. When ordering service parts, specify the correct part number, full description, quantity required, the unit model number and serial number.

The model and serial number decal for this unit is located on the inside right chassis upright. “Right” and “Left” are determined from a position sitting on the seat and facing forward.

GEHL® Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any previously delivered units.

**NOTE:** *Purchase equivalent, quality tires for your loader. Contact your dealer for replacement tire information.*

**NOTE:** *Replacement batteries are not provided by the GEHL Company. For battery specifications see “Engine and Engine Controls” chapter. ALL REPLACEMENT BATTERIES MUST BE PURCHASED LOCALLY.*

Refer to the abbreviations table located on this page for the various fastener descriptions. Standard attaching hardware torque values are also provided on the inside back cover. **If a part requires lubrication or a nonstandard torque value, it will be specified behind the part number description in parenthesis.**

Items shown in the parts list that do not have part numbers are shown for reference purposes only and are NOT available for purchase.

**Dimensions are in inches unless otherwise specified.**

**NOTE:** *The following abbreviations and symbols may be used herein:*

A . . . . .	Ampere
AR . . . . .	As Required
ASSY . . . . .	Assembly
AUX . . . . .	Auxiliary
CCA . . . . .	Cold Cranking Amperage
CYL. . . . .	Cylinder
FL. . . . .	Flare
FOPS . . . . .	Falling Object Protective Structure
GA . . . . .	Gauge
HEX . . . . .	Hexagon
HF. . . . .	High Flow
HYD . . . . .	Hydraulic
JIC . . . . .	Joint Industrial Council
kW . . . . .	Kilowatt
LBS . . . . .	Pounds
M . . . . .	Meter
MM (mm). . . . .	Millimeter
NA . . . . .	Naturally Aspirated
N/A . . . . .	Not Applicable
NEG . . . . .	Negative
N•m . . . . .	Newton meter
NO . . . . .	Number
NPT . . . . .	National Pipe Thread
PN. . . . .	Part Number
POS . . . . .	Positive
PSI . . . . .	Pounds per Square Inch
QTY . . . . .	Quantity
REF . . . . .	Reference
REQ'D. . . . .	Required
ROPS . . . . .	Roll Over Protective Structure
RPM . . . . .	Revolutions Per Minute
SAE . . . . .	Society of Automotive Engineers
SN. . . . .	Serial Number
SQ. . . . .	Square
ST. . . . .	Straight
TURBO. . . . .	Turbocharger
V . . . . .	Volt

# TABLE OF CONTENTS

## DESCRIPTION

## PAGE

### SECTION A: MAIN LOADER COMPONENTS

Mainframe . . . . .	1
Wheel Drives . . . . .	3
Engine and Engine Controls . . . . .	5
Fuel System . . . . .	9
Air Cleaner and Muffler . . . . .	11
Cooler Water System . . . . .	13
Hydrostatic Mount and Linkage . . . . .	15
Hydrostatic Plumbing . . . . .	17
Charge, Cooler and Return Filter Plumbing . . . . .	19
Auxiliary Circuit Plumbing . . . . .	21
Tilt Circuit Plumbing . . . . .	23
Lift Circuit Plumbing . . . . .	25
Self-Level Valve Plumbing . . . . .	27
Foot Pedal Control and Cabin Panel . . . . .	29
Steering Controls . . . . .	35
Lift Arm . . . . .	45
All-Tach™ Attachment System . . . . .	47
ROPS/FOPS . . . . .	49
Seat, Restraint Bar and Sound Suppression . . . . .	51
Rear Door and Engine Cover . . . . .	53
Electrical - Engine . . . . .	57
Electrical - Instrument Panel . . . . .	59
Electrical - Tail Lights . . . . .	61
Decals . . . . .	64

### SECTION B: HYDRAULIC COMPONENTS

Lift Cylinder . . . . .	73
Tilt Cylinder . . . . .	75
Drive Motor and Parking Brake . . . . .	77
Tandem Pump . . . . .	79
Gear Pump . . . . .	83
Main Control Valve . . . . .	85
Self-Leveling Valve . . . . .	87
Solenoid Valves - Lift and Tilt . . . . .	89
Brake Solenoid Valve . . . . .	91

### SECTION C: ENGINE SERVICE PARTS (3TNE88 ONLY)

Cylinder Block . . . . .	95
Gear Housing . . . . .	97
Flywheel Housing and Oil Sump . . . . .	99
Cylinder Head and Valve Cover . . . . .	101

# TABLE OF CONTENTS

## DESCRIPTION

## PAGE

### SECTION C: ENGINE SERVICE PARTS (3TNE88 ONLY)

Camshaft and Driving Gear . . . . .	103
Crankshaft and Piston . . . . .	105
Intake Manifold . . . . .	107
Exhaust Manifold . . . . .	109
Lubrication Oil System . . . . .	111
Cooling Water System. . . . .	113
Fuel Injection Pump . . . . .	115
Governor. . . . .	119
Fuel Injection Valve . . . . .	123
Fuel Line. . . . .	125
Starter Motor. . . . .	127
Alternator . . . . .	129
Gasket Set . . . . .	131

### SECTION D: KITS AND TIRES

Cab - Door with Wiper & Washer Kit 808265 . . . . .	135
Cab - Impact Resistant Door Kit 808382 . . . . .	136
Horn Kit 808274. . . . .	137
Four Point Lifting Kit 808273 . . . . .	138
Mirror, Rear View Kit 808269 . . . . .	139
Electrical Disconnect Switch Kit 808240 . . . . .	139
Pre-Cleaner Kit 808277 . . . . .	140
Engine Block Heater Kit 808396 . . . . .	140
Backup Alarm Kit 808264. . . . .	141
Cab - Sliding Side Windows Kit 808266 . . . . .	142
Strobe Light Kit 808279. . . . .	142
Cab - Heater/Defroster Kit 808267 . . . . .	143
Interior Dome Light Kit 808271. . . . .	144
Battery Disconnect Switch 808240 . . . . .	144
Self-Leveling Valve Kit 808263. . . . .	145
Cab - Door Interlock Kit 830600 . . . . .	146
Coolant Temperature Gauge Kit 810212 . . . . .	146
Tires . . . . .	147
Numerical Index . . . . .	148
O-Ring Table, Coupling & Adapter Torque Table . . . . .	155

### SECTION E: SCHEMATICS

Hydrostatic/Hydraulic Schematics . . . . .	157
Electrical Schematic. . . . .	158
Engine Harness Schematic* . . . . .	162
*MODEL 3635: SN 00001175 AND LATER. MODEL 3935: SN 00001337 AND LATER.	
Torque Specifications Table. . . . .	Inside Back Cover